



FAQ GUIDE

Q. WHAT TYPE OF BATTERY SHOULD I USE FOR MY LIFT TECH DC MOTOR?

A. DEEP CYCLE OR MARINE BATTERIES, 27 SERIES.

Q. WHAT TYPE OF BATTERIES ARE USED IN THE REMOTES AND WHERE TO FIND?

A. 4A BATTERIES, WALGREENS, BATTERIES +, AND BIG BOX STORES.

Q. HOW DO I CHANGE BATTERIES IN MY REMOTES?

A. REMOVE SCREWS ON THE BACK COVER AND CAREFULLY REMOVE COVER.

Q. HOW MANY AMPS DOES A LIFT TECH MOTOR DRAW?

A. RAPTOR LIFTS STEALTH DRIVES DRAW A MAXIMUM OF 90 AMPS SUSTAINED FOR LIFTING AND A PEAK LOAD OF 130 AMPS FOR INTIAL LOAD.

Q. HOW LONG CAN BATTERY CABLES BE?

A. NO LONGER THAN 15 FEET. THE SHORTER THE CABLE THE MORE POWER YOU HAVE.

Q. IF I DON'T HAVE POWER, IF I LOSE MY REMOTE OR KEY HOW CAN I GET MY LIFT UP / DOWN?

A. BY USING A 'DRILL BIT' AVAILABLE FROM YOUR DEALER.

R. WHAT IS THE FLASHING LIGHT INSIDE THE BOX?

A. THIS INDICATES THAT THE REMOTES ARE PROGRAMMED AND WORKING.

S. IS MY MOTOR RATED FOR 12V OR 24V?

A. THE RAPTOR LIFTS STEALTH DRIVE MOTORS CAN BE OPERATED BY EITHER 12 OR 24 VOLTS. 24 VOLTS ARE THE ONLY RECOMMENDED VOLTAGE FOR LOADING USE. 12V SYSTEMS SHOULD ONLY BE USED FOR NO LOAD APPLICATIONS

T. WHERE CAN I GET NEW OR SPARE KEYS?

A. CHECK WITH YOUR LOCAL DEALER

U. WHAT SHOULD I DO WITH MY MOTOR IN THE OFF SEASON OR WINTER SEASON?

A. YOU CAN LEAVE IT ON THE LIFT UNCOVERED, OR COVER IT. BUT WHEN COVERING, LEAVE THE BOTTOM OPEN TO ALLOW MOISTURE TO ESCAPE. FOR MORE STORING TIPS FOR YOUR SOLAR SYSTEMS AND BATTERIES CONTACT YOUR DEALER